


# EasyUploader for Windows

## Connect USB

Connect the module before launching EasyUploader

## Run the uploader

1. Select the chip : ATmega328P
2. Choose your com port
3. Pick the appropriate.hex file

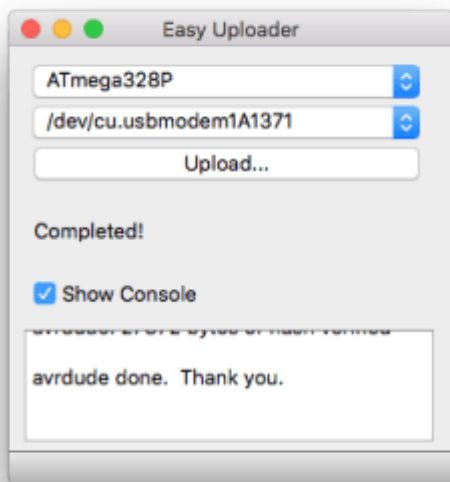

Attention do not upload .hex file containing bootloader (like the one that can be produced by the Arduino IDE) : this would delete the original bootloader and would require the use of a programmer to reflash it.