

SAM for Emy : now with Keyboard support

Check this page for more :
<https://www.polaxis.be/product/sam-firmware/>

Connect a USB keyboard and select **Keyboard** from the main menu.

- Type text directly from the USB keyboard.
- Press **Enter** to speak the current sentence with the current SAM settings.
- Press **Escape** to clear the text buffer.
- Use **Backspace** and **Delete** to edit the text.
- Use the cursor keys to move inside the text.
- Press **Tab** to append the current sentence to `keyboard.txt` on the SD card.

Talko Terminal

Talko Terminal is here.

After the success of Emy in the Terminal desktop format, Talko now comes in the same proven enclosure.

Inside, it's the **full Talko Eurorack module**, offered as a standalone tabletop unit – USB-powered, compact, and perfect for anyone who wants Talko without a rack.

It runs the complete Talko2 engine: numbers, alphabets, phonemes, classic phrase banks, real-time pitch and speed control, plus the new Error mode for continuous glitch textures.

A 7-segment display shows the active bank or effect.

Talko Terminal includes a USB-C port for power, **serial communication**, and **UF2 drag-and-drop firmware updates**, making hacking and experimentation easy.

A key advantage over the Bricky version: **you get direct USB access**, so there's **no need to open the case** to communicate with Talko or flash new firmware.



Aria Vowel generator

Aria Firmware – A Vowel Synth for Emy & Terminal ☐☐

Unlock new vocal textures with **Aria**, a playful and expressive vowel generator for your **Emy** or **Terminal** module.

Whether you're crafting robotic chants, abstract soundscapes, or vocal-like modulations, **Aria** brings a fresh dimension to your synth setup.

☐ **Key Features:**

✓ **Three Modes** – Trigger, Gate, and Continuous for flexible control


✓ **Smooth Transitions** – Adjust merge duration for seamless morphing

✓ **Customizable Parameters** – Sample rate, pitch, noise level & more

✓ **Easy Installation** – Load via SD card and switch firmware effortlessly


☐ **Get Aria now for just €4.99** – includes future updates!

☐ [Add to Basket](#)

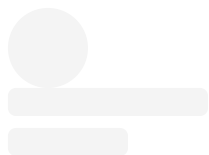



[View this post on Instagram](#)

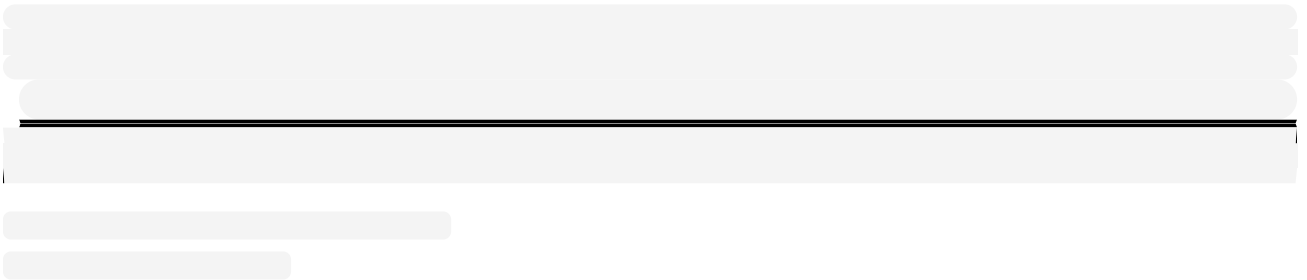

How to update or load a firmware on Krafter ?

- Open the plastic case by gently squeezing the top part and lifting it while holding the lower part.
- Install your [voice board](#)
- Connect KRAFTOR to your computer via USB.
- Double-click on the reset button
- A new drive named “KraftorBOOT” will show up on your computer, and the MIDI LED will start to glow gently
- Drag the firmware ending with “.UF2” to the “KraftorBOOT” drive
- Done! : KRAFTOR will restart using the newly installed firmware

KRAFTOR uploader

If you just want to update the firmware without changing the voice board, you can also do everything remotely via USB without opening the case.

Use this small utility in your browser :

SAMD21 Firmware Uploader v1.0

Use Chrome or Edge (Web Serial required). Safari currently does not support Web Serial.

Note: Your SAMD21 must already include a UF2-capable bootloader (KraftorBOOT) for this workflow.

1. Connect Device

Select your SAMD21 device via serial port

USB(vid=239a,pid=10a)

Status: Device connected

2. Start Bootloader

Reboot device into bootloader mode

Serial port will disappear when successful.

Status: Reboot confirmed - KraftorBOOT verified

3. Confirm/Pick Drive

After reboot, device appears as KraftorBOOT drive

KraftorBOOT (verified)

Status: Drive verified - KraftorBOOT detected

4. Upload Firmware

Select and upload UF2 firmware file

Kraftor_GC_firmware.uf2 (130048 bytes)

Or enter UF2 URL...

Ready

Status: Ready to upload

```

[3:32:41 PM] Device selected: USB(vid=239a,pid=10a)
[3:32:43 PM] Opening at 1200 bps...
[3:32:47 PM] Closed after 1200-bps touch. No disconnect event yet; continue by checking for KraftorBOOT drive.
[3:33:00 PM] Drive picked: KraftorBOOT. Checking for KraftorBOOT and UF2 markers.
[3:33:01 PM] Drive verification passed: this looks like KraftorBOOT.
[3:33:18 PM] UF2 selected: Kraftor_GC_firmware.uf2
[3:33:20 PM] Writing 130048 bytes to Kraftor_GC_firmware.uf2...
[3:33:22 PM] Serial device disconnected: unknown interface
[3:33:22 PM] Drive disconnected immediately after write finalization; treating as successful flash.
[3:33:22 PM] Write complete. Device should reboot and the drive may disappear.
  
```

You can run the utility one line here https://deladriere.github.io/samd21_UF2_uploader/

or access the source code here :

GitHub - deladriere/samd21_UF2_uploader
deladriere/samd21_UF2_uploader
To upload your firmware into Krafter

Nexus firmware update

2 new exciting firmware Updates for Nexus!

Enhanced MIDI Functionality:

- Text and Phoneme via MIDI: Send text or phonemes directly through MIDI.
- Sequencer Integration: Pre-store phoneme or text sequences in your piano roll. Add a "Speak" note at the end to activate speech.
- MIDI controls to adjust your Nexus device's speech characteristics in realtime
- 20k Word Library: Access a vast collection of pre-made MIDI words, ready to drag and drop into your favorite sequencer.



[20K words for NEXUS MIDI alphabet](#)

1 file(s) 10.62 MB

Login is required to access this page

[Login](#)



[View this post on Instagram](#)



Phoneme Mode:

- Simplified Selection: Easily choose from essential phoneme groups like “Vowels” and “Consonants.”

- **User-Friendly Controls:** Straightforward pitch and speed adjustments, perfect for beginners in speech synthesis.
 - **Simple Activation:** Get started with just a gate signal.
-

Sino vox : now with keyboard input

Two updates to the Sino vox firmware :

1. **update** : in the number function, it is now possible to trigger the speech from the main button
2. **new**: keyboard mode



Connect a USB keyboard to the USB port using the gender changer adapter.

Do not use this port to power something apart from a standard keyboard.

The maximum current that can be provided is 300 mA.

If you need a keyboard, check out this [Wireless Keyboard](#).



□Text Operation:

Type the text and **press Enter to start** the speech. (The Function button is also active)

Use the **Backspace to delete** the last character.

Use **Escape to erase the string** and start over.

Use the five potentiometers to alter the Speed, Voice, Pitch, Volume, and Language (Pinyin or English)

The busy signal goes up while a key is pressed. (if you want to trigger external sounds, for example)

Firmware



[Sino Firmware + TRS MIDI](#)

3 file(s) 68.54 KB

Login is required to access this page

[Login](#)



Sino Firmware + USB MIDI

5 file(s) 68.54 KB


Login is required to access this page

[Login](#)

more info in the [user manual](#)



[View this post on Instagram](#)

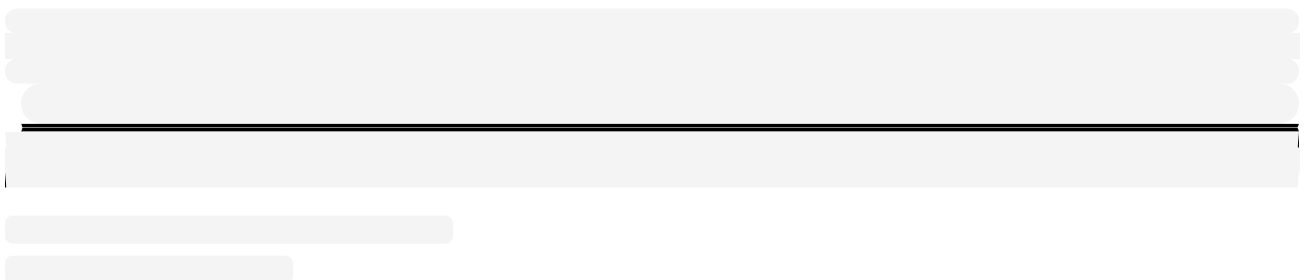

How to update or load a firmware on Emy & Terminal ?

Option 1 (requires the Emy version 2.1 or bigger to be installed first)

- Download the firmware
- Save it on the SD card with a name that makes sense to you (like "emy.bin")
- load it from the code>flash menu.
- If changing the add-on vox :
 - switch the power off
 - install the add-on vox
 - re-apply power

Note This function simply

- *copies the firmware "blalbla.bin" to "firmware.bin"*
- *reboots the system*
- *deletes the firmware.bin*
- *keeps the original with its name.*

You can keep all the firmware on the microSD card and call them whenever you change the add-on vox

Note : Change the firmware before changing the add-on vox

Option 2

- Download the firmware
- Save the firmware exactly as "**firmware.bin**" on the SD card (and not "**blabla.bin**")
- Re-apply power

New text-to-speech module : Nexus vox

A truly remarkable pair of chips power up the Nexus vox. These chipsets translate plain English text into speech in real time with complete dynamic control of the voice characteristics.

The TTS processor utilizes RC Systems' DoubleTalk TTS technology, based on a patented voice concatenation technique using actual human voice samples.

Voice control parameters, such as speed, volume, tone, pitch, and expression, can also be embedded within the text stream for dynamic, on-the-fly voice control.

There is even a real-time reverb effect!


A serious competitor for the [Vax vox](#) module!

Say tuned for more demos...





[View this post on Instagram](#)

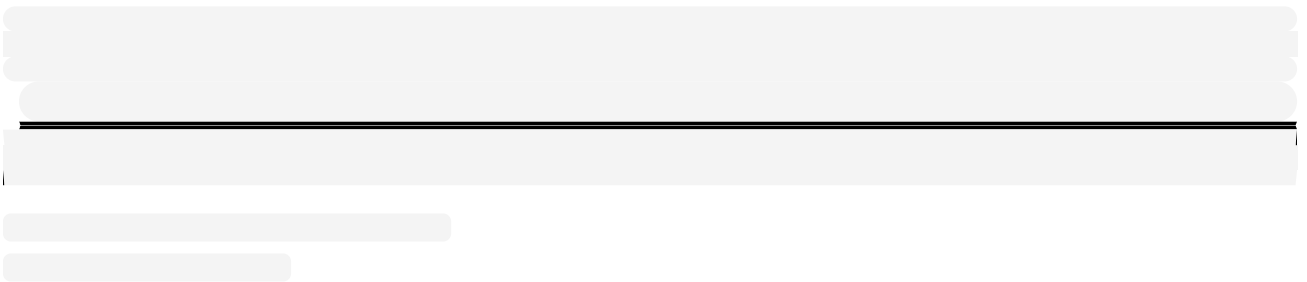

SP0 vox sustain allophones in

phonetic files

Adding a duration marker to alter the normal duration of the allophone.

Here is the syntax to use in your .spo file : **(add a + marker and the duration in milliseconds)**

technology: \TT1 \EH +500 \KK1 \NN1 \AA +200 \LL \AX +200 \JH \IY

mathematics: \MM \AE \TH \AX \MM \AE \TT1 \IH \KK1 \S

spacecraft: \S \PP \EY \S \KK1 \RR2 \AE \FF \TT1

electronic: \IH \IH \LL \EH \KK1 \TT1 \RR2 \AA +200 \NN1 \IH +200 \KK1

electronic: \IH \IH \LL \EH +400 \KK1 \TT1 \RR2 \AA +800 \NN1 \IH +500 \KK1

SP0 vox : reading phonetic files

SP0 vox can read phonetics files from the microSD card.

Store your vocabulary in a text file and use “.SP0” for the extension

The structure of the file has to respect the following :

A label, followed by the allophone list, each separated by the \ character

1: \WW \AX \AX \NN1

2: \TT2 \UW2

3: \TH \RR1 \IY

4: \FF \FF \OR
5: \FF \FF \AY \VV
6: \SS \SS \IH \IH \PA3 \KK2 \SS
7: \SS \SS \EH \EH \VV \IH \NN1
8: \EY \PA3 \TT2
Empty line

Check the [manual](#) for the list of the supported allophones

□ don't forget to add an empty line at the end of the file.

I also uploaded a dictionary of 130.000 words in phonetic format to get you started.



[135000 Words in phonetic for SP0 \(CMUDict\)](#)

1 file(s) 5.00 MB

Login is required to access this page

[Login](#)

As usual, Emy sends the label over serial communication on the USB port. Here is another example where TouchDesigner is receiving the labels :

If you want to get started using TouchDesigner, also check this file



[TouchDesigner basic](#)

1 file(s) 4.42 KB

Login is required to access this page

[Login](#)

: all it does is connect to Emy and display the text on the screen

